


Maintenance

- Recommended lights to be turn on between 10 -14 hrs, it will be ideal to turn the Lights Reactor on when the main aquarium lights is off. Please ensure pumps are running at all times except during maintenance.
- When Chamber is 70-80% full, please harvest its content.
- During harvesting, please off both the lights and pump, ensure power plugs are remove from wall socket. Lift the strainer to the top of the chamber and flip out the holder (see diagram).

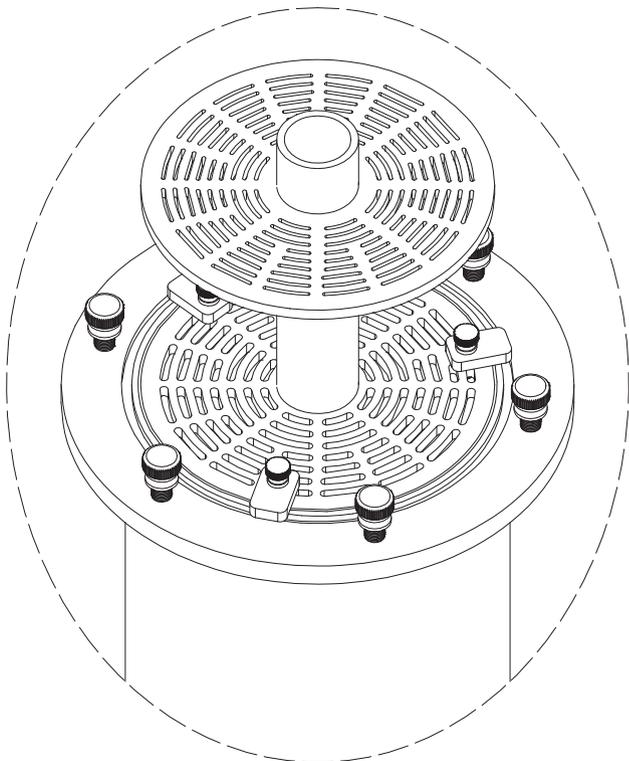

HONYA CO., LTD is committed to continuous product development, we hereby reserve the right to revise the product specifications or designs without prior notice.

For any further enquiry/assistance and latest product updates,

Please Visit at www.reefoctopus.com.



Lights Reactor


Instruction Manual

LR-150

LR-200



Explosion Chart

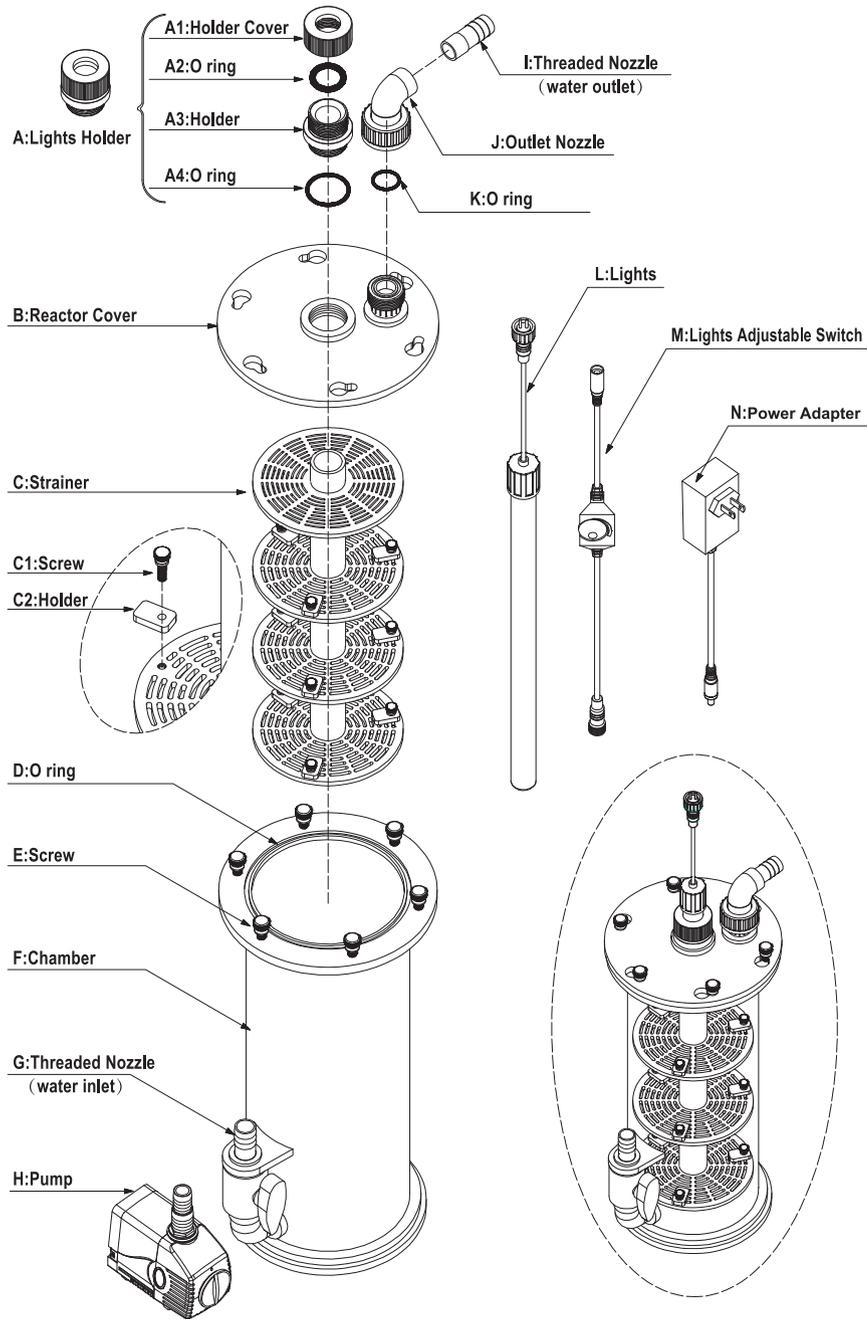

What is included

Article Code	Items	LR-150		LR-200	
		Model No.	Qty	Model No.	Qty
A	Lights Holder	-	1	-	1
A1	Holder Cover	-	1	-	1
A2	O ring	22*5	1	22*5	1
A3	Holder	-	1	-	1
A4	O ring	35*3	1	35*3	1
B	Reactor Cover	-	1	-	1
C	Strainer	-	1	-	1
C1	Screw	M5*15	9	M5*15	9
C2	Holder	-	9	-	9
D	O ring	145*4	1	203*3.5	1
E	Screw	M8*25	6	M8*25	8
F	Chamber	-	1	-	1
G	Threaded Nozzle	17/20mm	1	20mm	1
H	Pump	AQ-1200	1	AQ-2000	1
I	Threaded Nozzle	20mm	1	25mm 20mm/25mm	1
J	Outlet Nozzle	-	1	-	1
K	O ring	22.2*2.4	1	28.8*3.1	1
L	Lights	L-410	1	L-410	1
M	Lights Adjustable Switch	-	1	-	1
N	Power Adapter	DC12V / 2A	1	DC12V / 2A	1

Product Specification

Item No.	Product	Wet/Dry	Diameter		Footprint				Height		Tank Volume		Power(w)		Pump
			mm	inch	mm	inch	mm	inch	L	US Gal	LED	Pump			
130309	LR-150	Both	150	5.9	230	205	9.1	8.1	510	20.1	200-600	52-158	18	15	AQ-1200
130310	LR-200	Both	200	7.9	285	265	11.2	10.4	510	20.1	500-1000	132-264	18	45	AQ-2000